




Sock Hoop Inserts

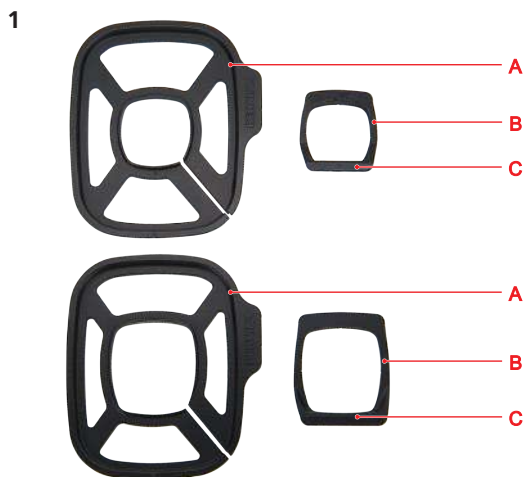

Information

Scope of Delivery

- 1x Mini Sock Hoop Insert:
 - 1x Inner Hoop
 - 1x Clamp
- 1x Standard Sock Hoop Insert:
 - 1x Inner Hoop
 - 1x Clamp

Purpose

Mini Sock Hoop Insert:

- To embroider socks. To be used in combination with the medium embroidery hoop.
- Max. Embroidery Area: 1,3 x 1,6" (34 x 42 mm)

Standard Sock Hoop Insert:

- To embroider socks. To be used in combination with the medium embroidery hoop.
- Max. Embroidery Area: 1,8 x 2,3" (46 x 60 mm)

For Your Safety

Before using this accessory, please read this instruction manual as well as the instruction manual of your machine carefully.

Overview

- A Inner Hoop
- B Clamp
- C Clamp Handle



Application

Hooping the Sock

- > Prepare the outer hoop of the medium embroidery hoop and open the adjusting screw.
- > Position the inner hoop of the sock hoop insert with the BERNINA lettering to the right. Place the stabilizer on the inner hoop. (Fig. 2)
- > Turn the sock inside out to the wrong side. Insert the clamp into the sock with the clamp handle first so that the area to be embroidered is under the clamp.
- > Place the clamp on the upper edge of the clamp recess with the sock cuff facing upwards. Hold the position with one hand. (Fig. 3)
- > Press down the clamp on the clamp handle with the other hand.
 - The clamp is completely enclosed in the inner hoop.
- > To expose the embroidery area of the sock, pull the sock cuff completely over the edge along the clamp. (Fig. 4)
- > If necessary, flatten the fabric in the embroidery area and cut off any excess stabilizer. (Fig. 5)
- > Tighten the adjusting screw of the outer hoop. (Fig. 6)

NOTICE

Hooping or Rehooping the Sock with the Embroidery Hoop Attached
Damage to the coupling of the embroidery hoop.

- > Remove the embroidery hoop before hooping the next sock or rehooping the sock.

Tips:

- > To avoid scratchy stabilizer residue in the sock, we recommend using a self-adhesive water-soluble stabilizer.
- > For optimal embroidery results, make sure that the fabric is flat and not too stretched when the sock is hooped.
- > To prevent the stitches from sinking into the sock too much, place a layer of washable embroidery film on top and secure the layers using the "Basting" function.

Attaching the hoop

- > Before using the hoop for the first time or if the needle position and the center of the hoop do not match, calibrate the hoop in the machine settings. Use the embroidery template and the inner hoop of the medium hoop for this purpose. Refer to the instruction manual of the machine.
- > Fit Embroidery Foot #26 and select it on the machine.
- > Open the embroidery design on the machine and make any desired adjustments.
- > Select the appropriate sock hoop insert on the machine – S-Mini/S-Std.
- > Attach the embroidery hoop with the hooped sock. Refer to the instruction manual of the machine.

Removing the Embroidery Hoop

- > Refer to the instruction manual of the machine.