





Information

Purpose

• For quilting over uneven surfaces like embroidery, appliqué or thick seams.

For your safety

Before using this accessory, please read the instruction manual at hand as well as the instruction manual of your machine carefully.

Application

How to use the Adjustable gliding cup foot

- > Lower the feed dog.
- > Attach the slide-on table.
- > Attach the presser foot.
- > Select the Straight stitch No. 1 or the Zigzag No. 2.
- > If possible, minimize up and down movements of the presser foot. To do this, set the presser foot pressure to 0 or lower on the machine.
- > Select the «Needle stop down».
- > Place the fabric under the presser foot.
- > Lower the presser foot.
- > Adjust the height of the presser foot. To do this, turn the adjusting wheel of the presser foot until the fabric can be moved back and forth under the presser foot sole without difficulty. (Fig. 1)
- > Thread the needle. When doing so, make sure that the presser foot is low-
- > Bring the bobbin thread up to the right side of the fabric.

Tips

- > With the Q Series, select the quilting mode «BSR1» or «MAN».
- > If skipped stitches occur, reduce the presser foot height or the sewing
- > For a beautiful stitch formation, use the same thread quality and color as upper and bobbin thread.

