

BABY LOCK

SEWING ACCESSORIES

Free-Motion Darning Foot

(BLMJZ-FM)

Instructions

MACHINE SETTINGS


Stitch type:	Straight Stitch
Stitch Width:	3.5
Stitch length:	0-4



1. Select straight stitch. Set needle in the center needle position.
2. Using drop feed lever, lower feed dog.
3. Remove the presser foot and presser foot holder. Screw the Darning/Free Motion quilting foot onto the presser bar with the extended arm of the foot resting above the needle clamp screw.
4. Holding the needle thread, take one stitch and pull up bobbin thread through the fabric
5. Lower presser foot lever and start sewing at a slow to medium speed, moving the fabric back and forth with a steady rhythm.
6. Turn fabric and sew another layer of stitching across the first layer of stitching.

CAUTION:

When using Darning/Free Motion quilting foot on machine with zig-zag stitches do not set the stitch width any wider than 4.0. Otherwise needle may deflect and hit the Darning/Free Motion quilting foot causing damage to machine or personal injury.

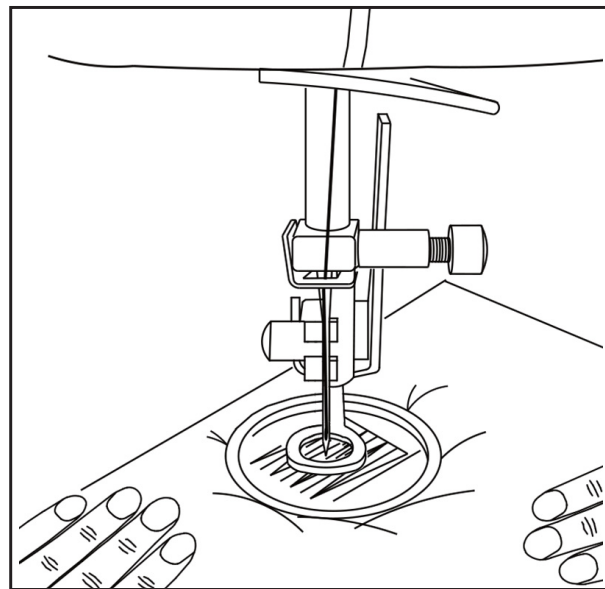

baby lock

FOR THE LOVE OF SEWING

www.BabyLock.com


LNIS-BLMJZ-FM

Brought to You by Tacony Corporation®.

Raccommodage/ Courtepointe Mouvement Libre

(BLMJZ-FM)

Instructions

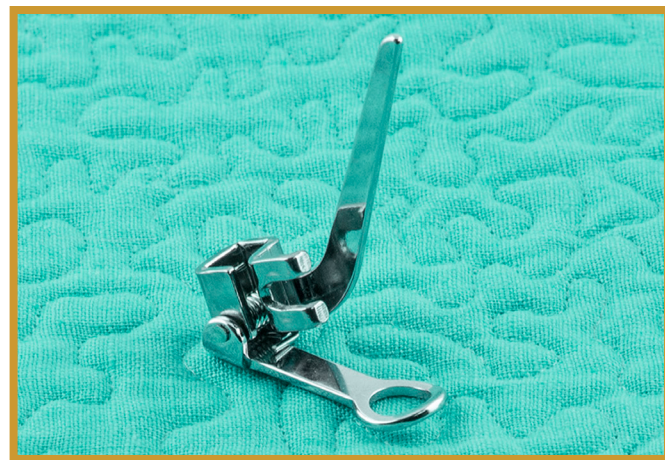

RÉGLAGES DE LA MACHINE

Type du point:	point droit
Largeur du point:	3.5
Longueur du point:	0-4

1. Sélectionnez le point droit. Réglez l'aiguille à la position centre.
2. Escamotez les giffes au niveau inférieur à l'aide du levier.
3. Retirez le pied presseur et le support du pied presseur. Fixez le pied pour raccommodage/courtepointe mouvement libre à la barre avec le bras prolongée du pied reposant au-dessus de la vis du support d'aiguille.
4. En tenant le fil de l'aiguille, piquez un point et tirez vers le haut le fil de la canette à travers le tissu.
5. Abaissez le levier du pied presseur et commencez à coudre à une vitesse lente ou moyenne, déplacez le tissu avant et arrière à un rythme régulier.
6. Tournez le tissu et coudre une autre épaisseur de couture sur la première épaisseur de couture.

AVERTISSEMENT:

Pour utiliser le pied pour raccommodage/courtepointe mouvement libre à la machine à l'aide de points zigzag, ne pas régler la largeur du point à plus de 4.0. Autrement l'aiguille peut dévier et heurter le pied l'aiguille risque de se déformer et de heurter le pied raccommodage/courtepointe mouvement libre causant des dommages à la machine ou des blessures.

