Cover-/Chainstitch foot

#C13

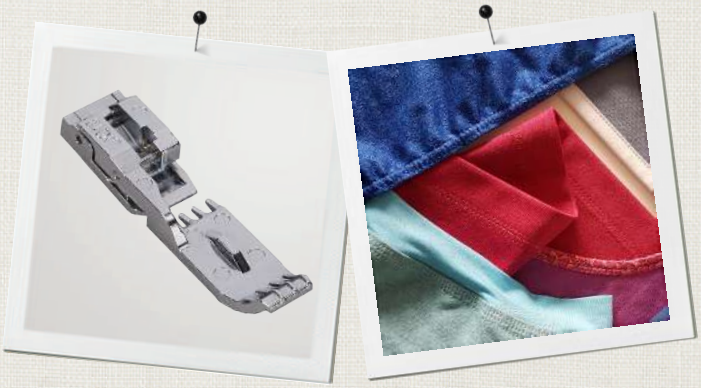

1

2

Information

Purpose

- For cover and chainstitch seams, for general sewing work and for top-stitching.

For your safety

Before using this accessory, please read the instruction manual at hand as well as the instruction manual of your machine carefully.

Markings

A Right needle for CS (RC)
B Center needle for CS (CC)
C Left needle for CS (LC)

Application

Sewing a cover- or chainstitch

> Thread and set the machine for a cover- or chainstitch.
> Adjust the stitch length suitable for the fabric.
> Place the fabric under the presser foot and lower the presser foot.
> Sew the seam.
> To sew parallel lines or pintucks, use either the left or the right edge of the foot or the scale on the coverstitch insert. (Fig. 2)

BERNINA International AG | CH-8266 Steckborn Switzerland | www.bernina.com | © Copyright by BERNINA International AG

made to create BERNINA

1038405.00A.04
2020-05 EN