


# Lace Applicator Foot

(BLE8-LF)

## Instructions


Use this foot for guiding lace onto your fabric with a 2-thread flatlock or to attach ribbon to your fabric under a cover stitch. Or, attach decorative trim by combining an overlock stitch with a chain stitch. Follow your "Quick Reference Threading Guide" for various stitches and settings.

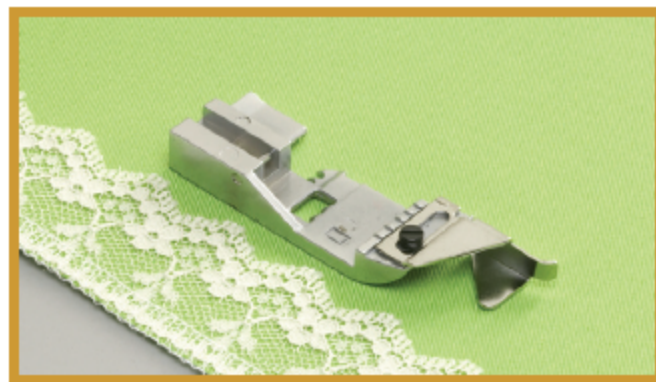

### MACHINE SETTINGS

Needle:	Right, left, both or Coverstitch
Upper knife:	Engaged "UNLOCKED"
Differential feed:	Normal
Stitch length:	3-4
Stitch width:	3.5

1. Snap on the lace applicator and set up the machine for the stitch you desire.
2. Loosen adjustable screw on the top of the lace foot (fig. 1).
3. Raise the presser foot.
4. Place fabric right side up under the foot up to the cutting blade.
5. Insert lace right side down into the guide and under the foot against the inside edge of the guide (fig. 2).
6. Align right edge of guide with placement of right edge of lace.
7. Move the guide right or left to align with the needles being used (fig. 3).
8. Lower the presser foot.
9. Check guide position and tighten the screw.
10. Test sew sample for desired effect.

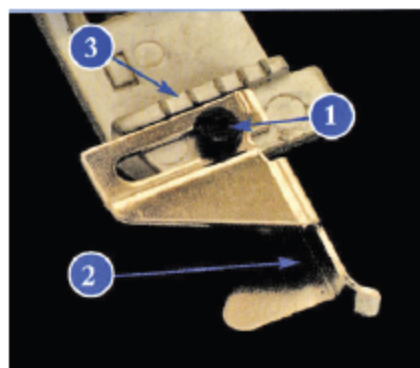

### ADJUSTMENT OF GUIDE

