



AcuView Optic Magnifier


When you need to get a closer view, attach the AcuView Optic Magnifier to make it easy to see the tiniest detail under the needle. Useful when threading, adjusting the position of the fabric and carrying out detailed work.

Full Set Including Holder, 20x, 40x, and 60x Magnifications

Part Number: 202130002


NEW Set Including Only Holder and 20x Magnification

Part Number: 202400006

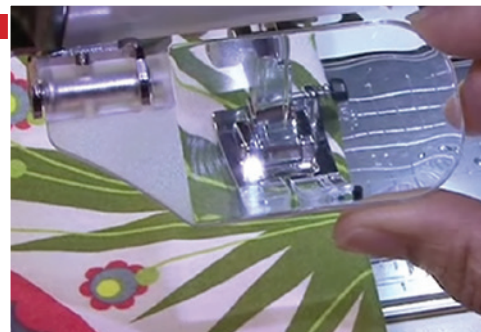


How to Use the AcuView Optic Magnifier

1. Locate a small hole on the bottom left side of the machine head with your hand.
2. Insert the metal post on the back of the AcuView Optic Magnifier. Push until you feel it catch.
3. Remove by pulling down on the metal post.

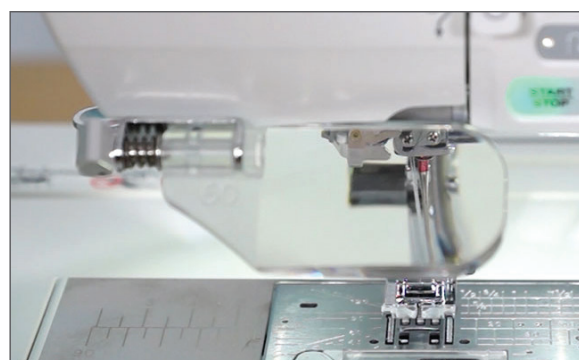

How to Switch the AcuView Optic Magnifiers

1. AcuView Optic Magnifier set 202130002 comes with three levels of magnifications - 20x, 40x, and 60x.
2. To change the magnifiers, flip the plastic spring loaded switch to the left of the magnifier. This will loosen the spring holding the magnifier in place.
3. Put the desired magnification in place, and flip the plastic switch back to engage the spring.

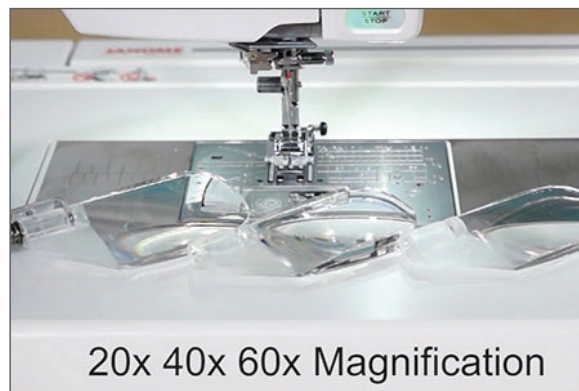

20x 40x 60x Magnification

Compatible with:

MC Class Series

15000
14000
12000
9400
8900
8200
7700
6700

Skyline Class Series

S9
S7
S5
S3

M Class Series

M7200, M7100, M7050
AMH-M100
M6100, M6050
81200DC [MOD-200]
81100DC [MOD-100]
81050DC [MOD-50]
81030DC [MOD-30]
50816 [MOD-19]
50812 [MOD-15]
50806 [MOD-11]